

AAC Keys for Mac OS X

System Requirements

Mac OS 10.2. or greater

Usb to serial adaptor or Bluetooth enabled Mac and AAC Device

Installation

Double click on [AAC Keys Install](#) and follow the steps to install AAC Keys.

Using AAC Keys

By default AAC Keys is installed in the Applications folder. To launch AAC keys double click on the AAC Keys Icon.




AAC Keys


Once AAC Keys is launched it will appear in the menu bar.



Click on the AAC Keys menu item and select preferences

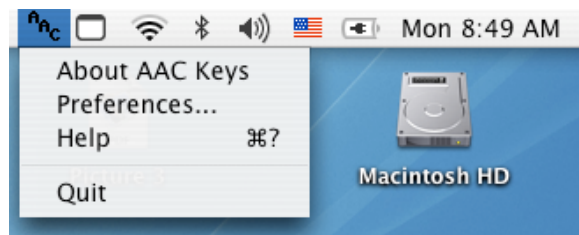

Now just select your serial device and baud rate and click apply and you are ready to start using AAC Keys

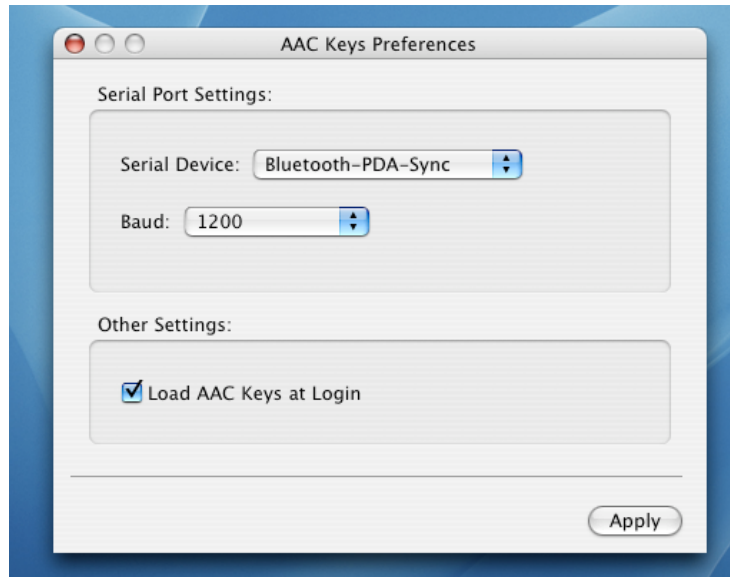

For detailed help on using AAC Keys select help from the AAC Keys menu.